

Keypad Programming

To clear an existing PIN, press and hold (in order): PROG, 6, UP/DOWN ARROW

1. Press in order: 3 5 7 PROG
2. Enter your PIN and press the [PROG] button.
-Red LED blinks once per second.
3. Press the [PROG] button a second time.
-Red LED blinks twice per second.
4. Press the total number of Doors you wish to control.
(Press either [2] or [3])
5. Press the [PROG] button a third time.
- Red LED blinks several times and turns off.

Programming the Door Openers

6. Decide which door will be Door #1, #2 and #3.
-Learn Code Indicator LED (on opener) blinks.
7. Enter your PIN and press the arrow up/ arrow down triangle button.
-Learn Code Indicator LED continues to blink.
8. Press the number you have picked for this Door Opener [1], [2], or [3].
-Learn Code Indicator LED stays on.
9. Press the arrow up/arrow down triangle button a second time.
-Learn Code Indicator LED turns off.
10. Press the arrow up/arrow down triangle button a third time.
-Door should move.

Repeat Steps 1 thru 5 for each door opener. Each door opener must be programmed to receive the signal from the wireless keypad.

TROUBLESHOOTING:

- If the garage door does not move, check the red LED on the keypad.
- If the LED is blinking rapidly, the PIN was entered incorrectly.
- Any keypad button will control the door for 30 seconds after the door starts moving.
- Rapid blinking of the LED indicates an error. After a few seconds the LED will turn off and then you can try again.
- If the red LED does not blink during use, the battery needs to be changed.

Mounting Instructions

- Remove battery cover.
- Drill a 1/16" hole for the top mounting screw.
- Install a screw into the top drilled hole, leaving a 1/8" gap between the screw head and the wall.
- Hook the keypad over the screw.
- Mark the bottom hole then screw in the bottom screw.
- Reinstall the battery cover.